



# SERVICE MANUAL

## UA-140/160R

### STEREO AMPLIFIER

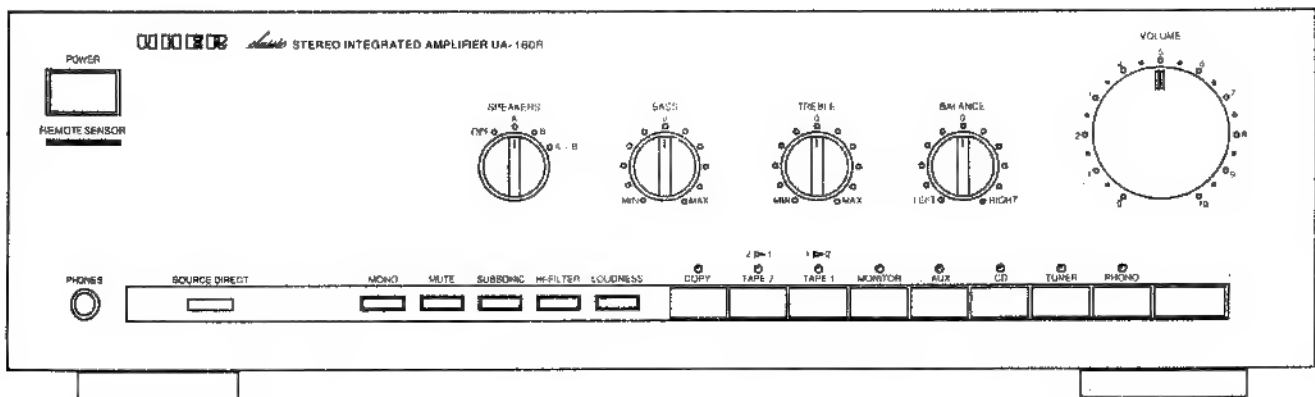





# BLOCK DIAGRAM (FOR UA-160R)

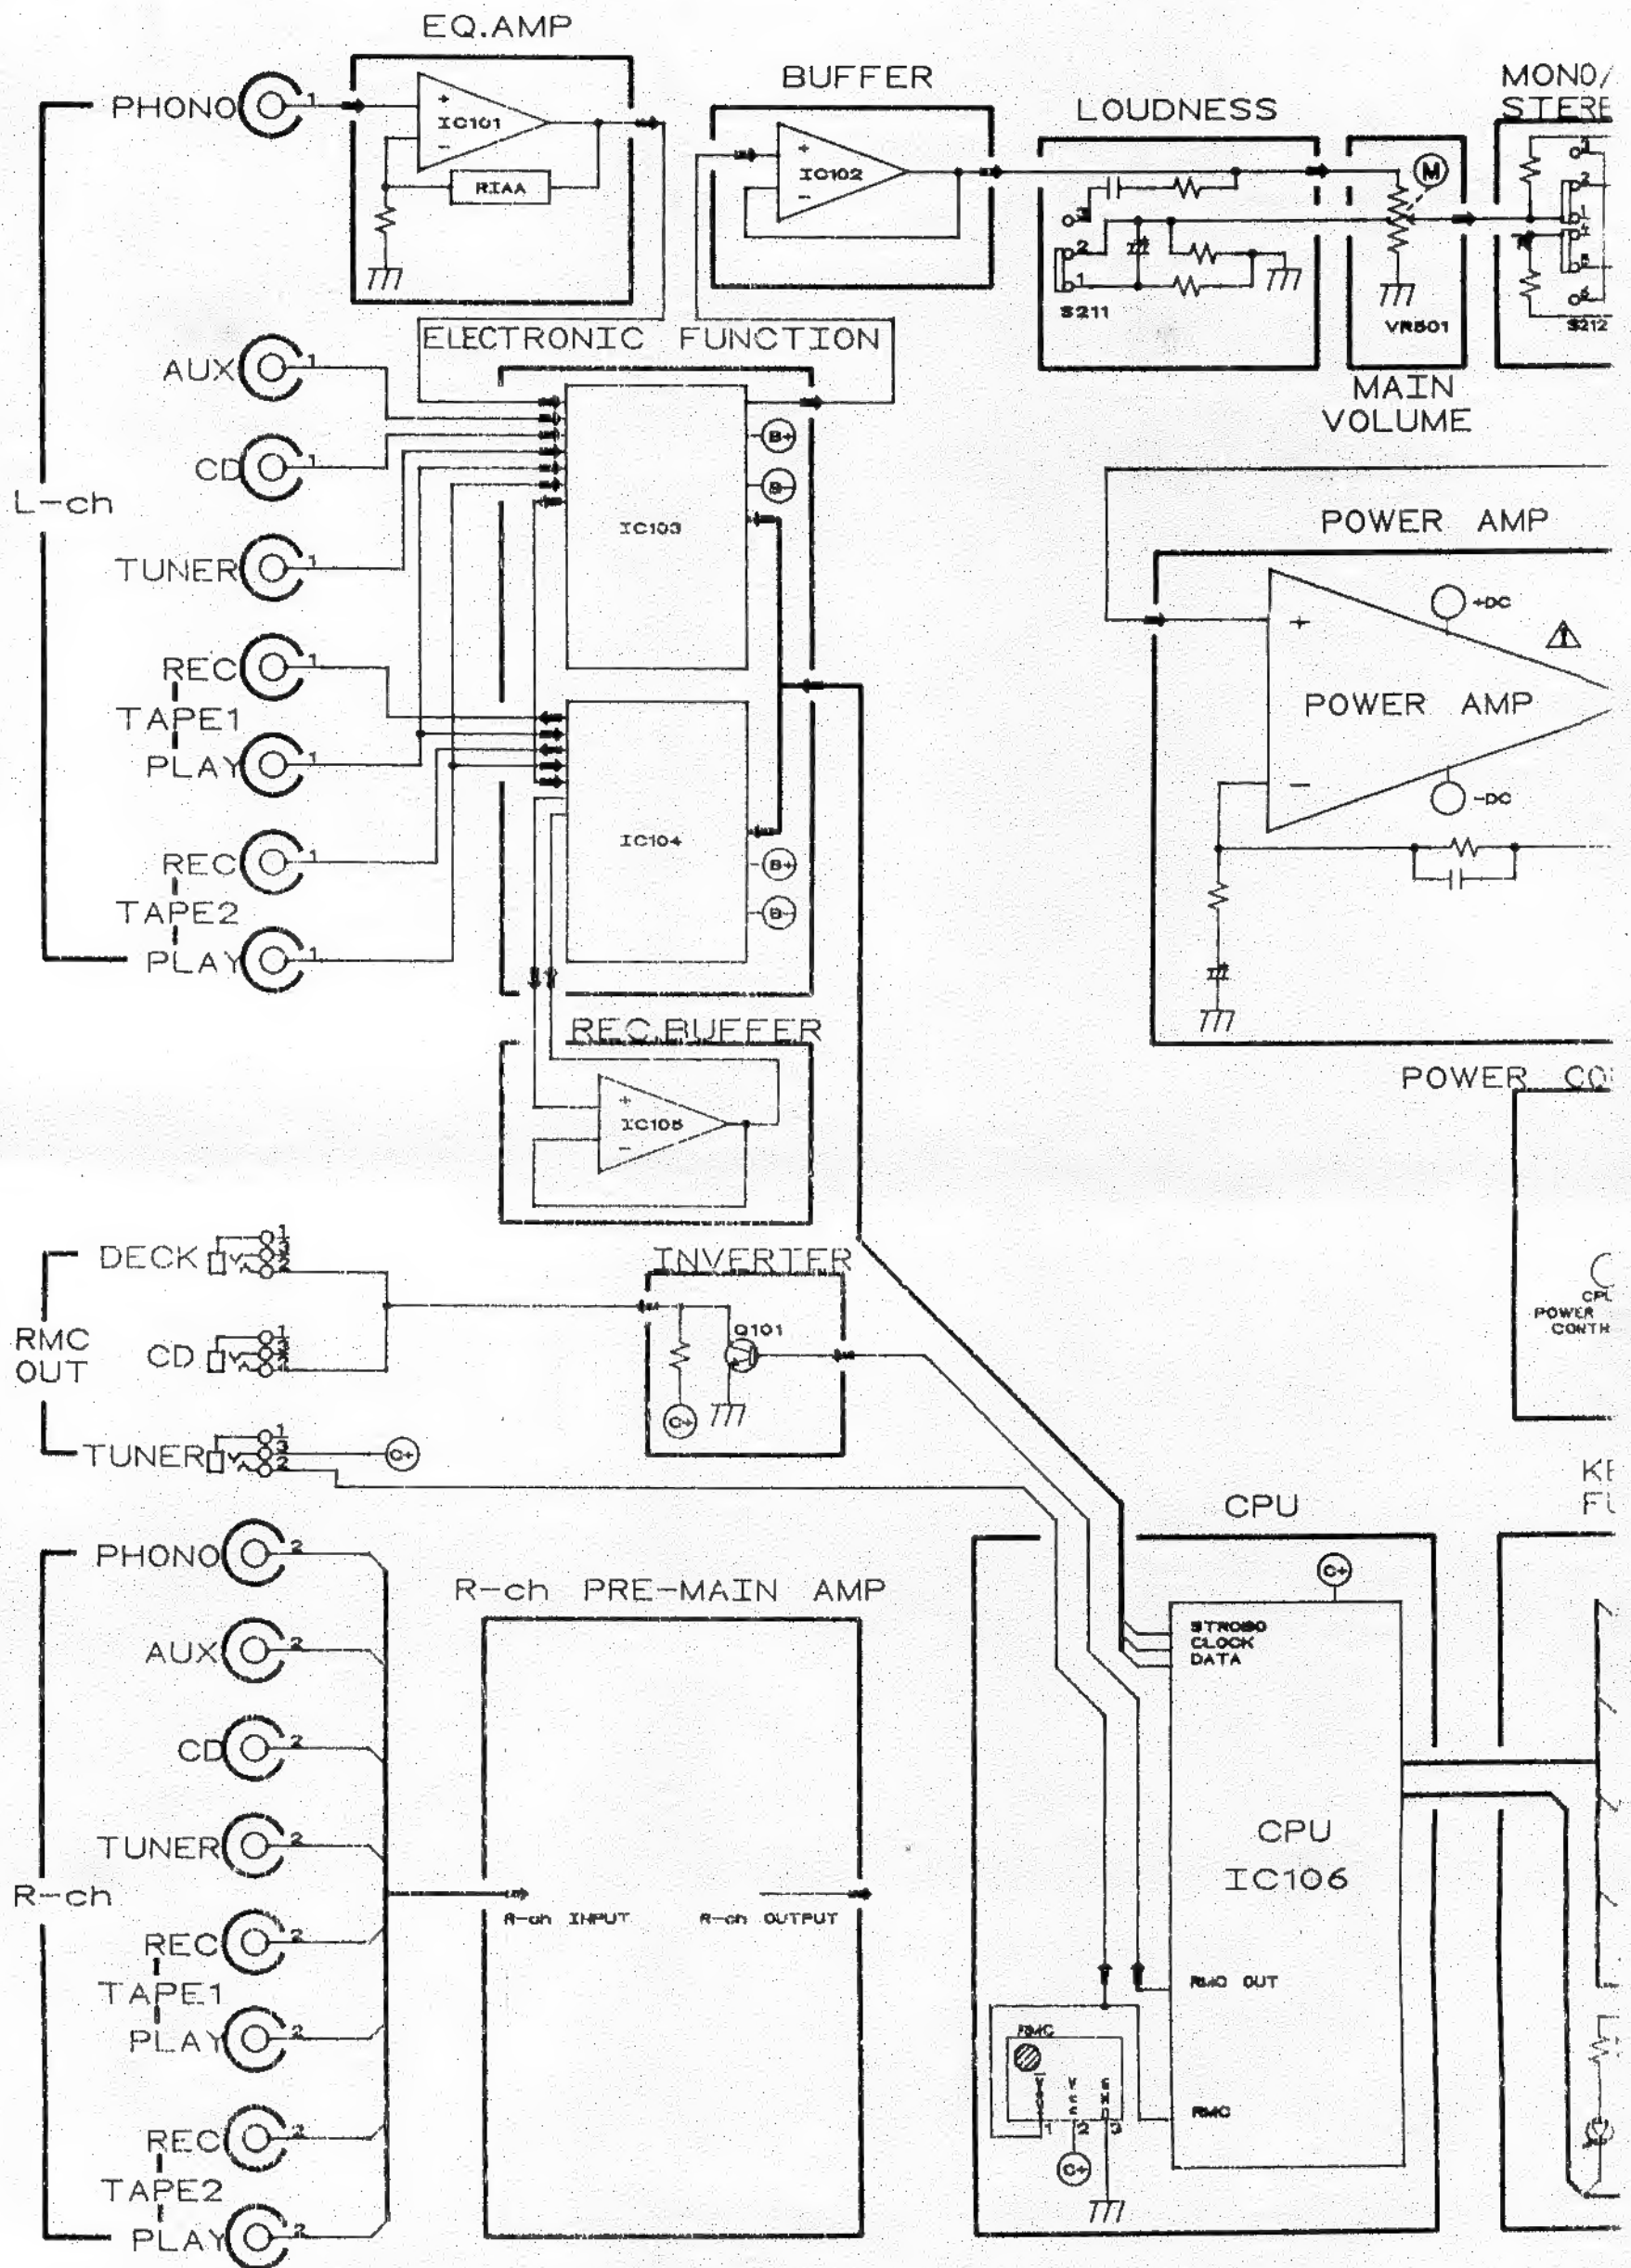







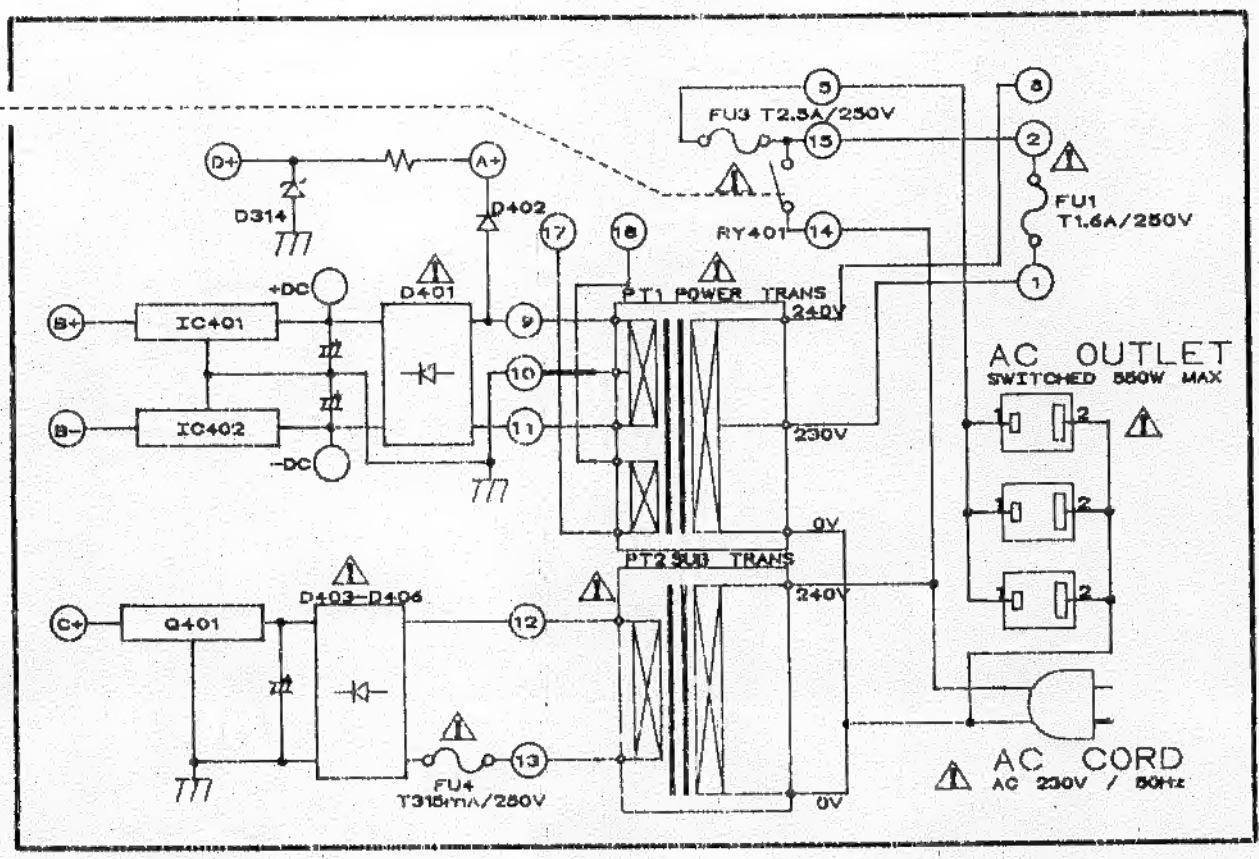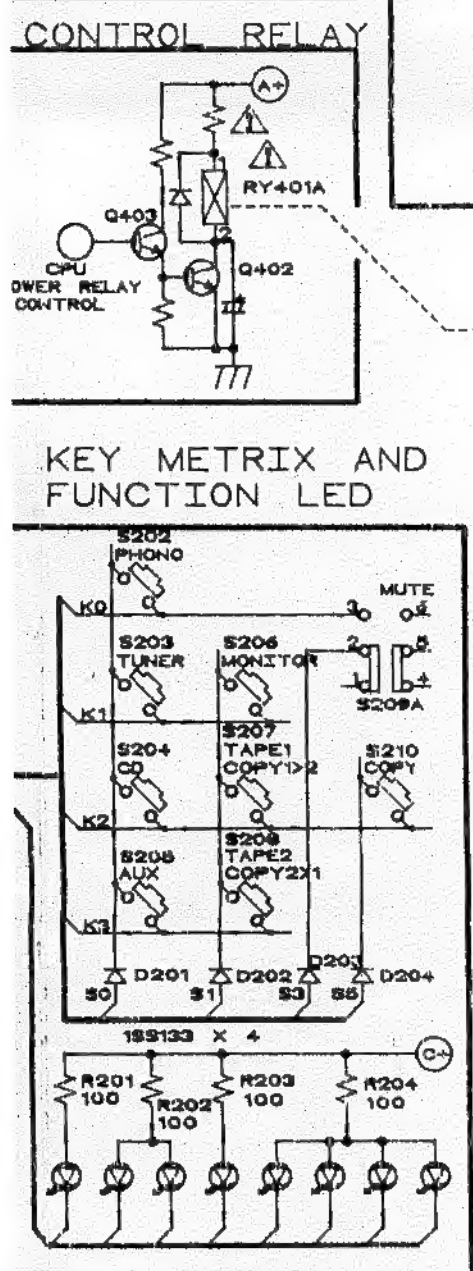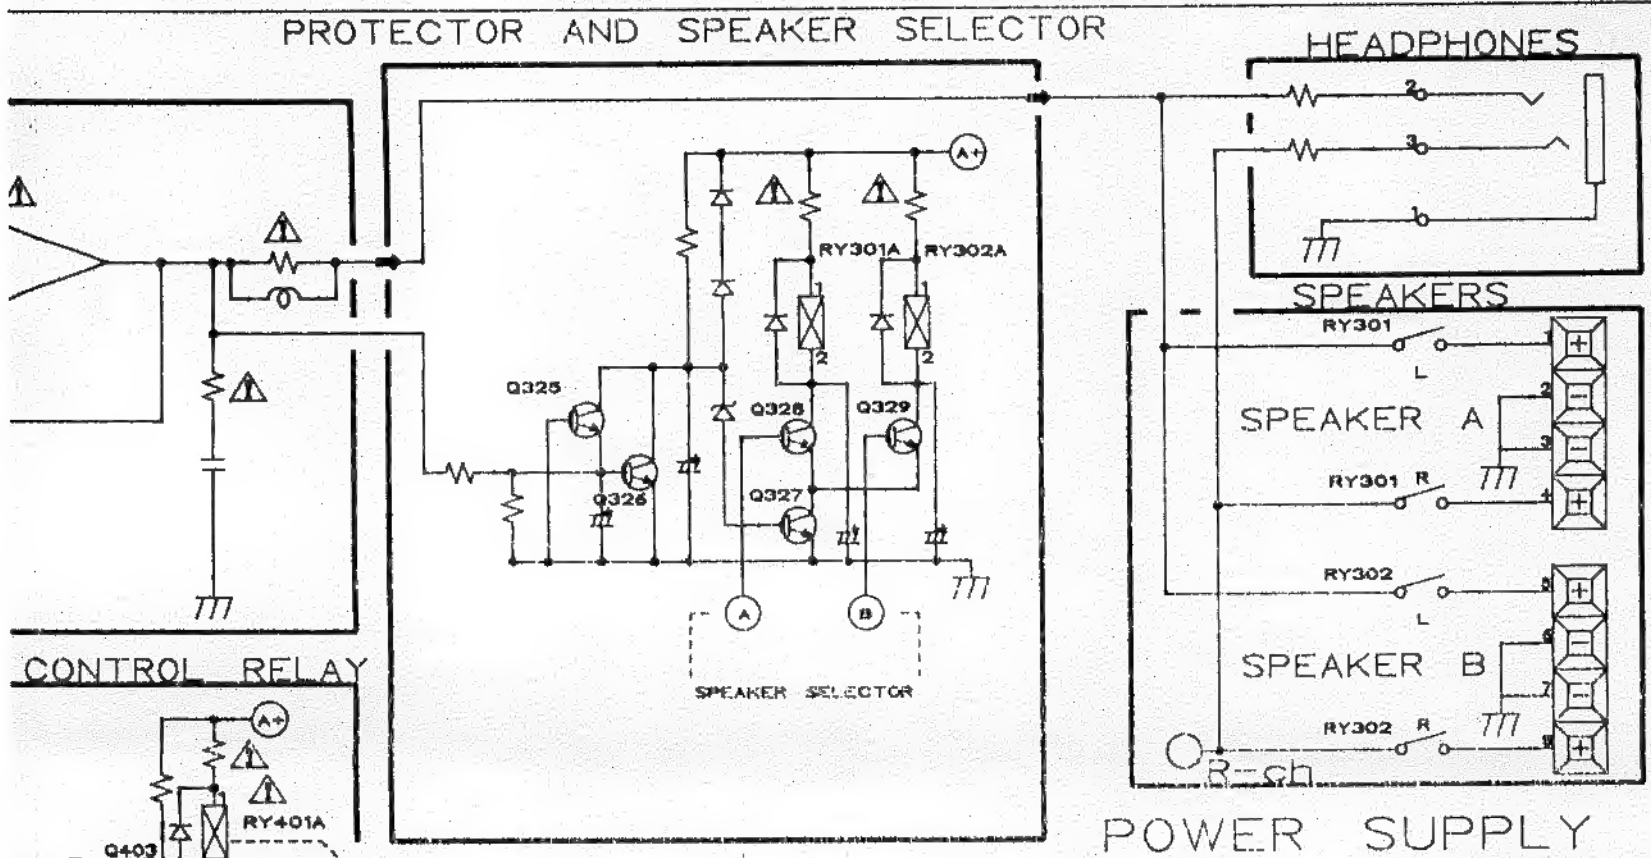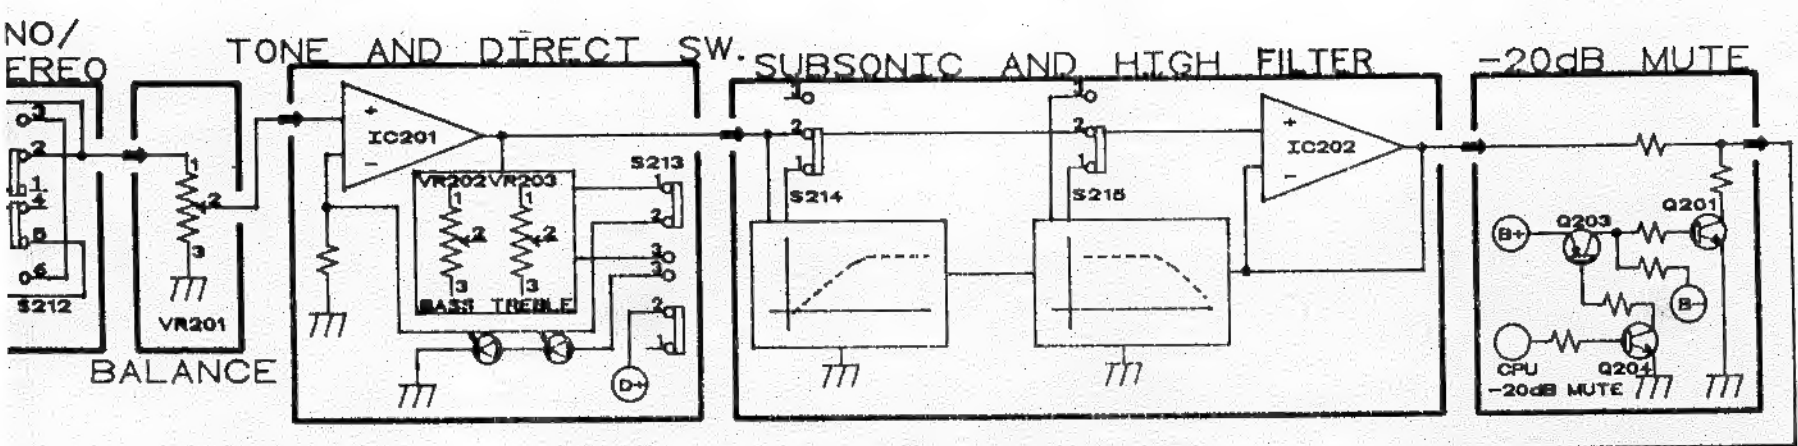











# AF ASS'Y

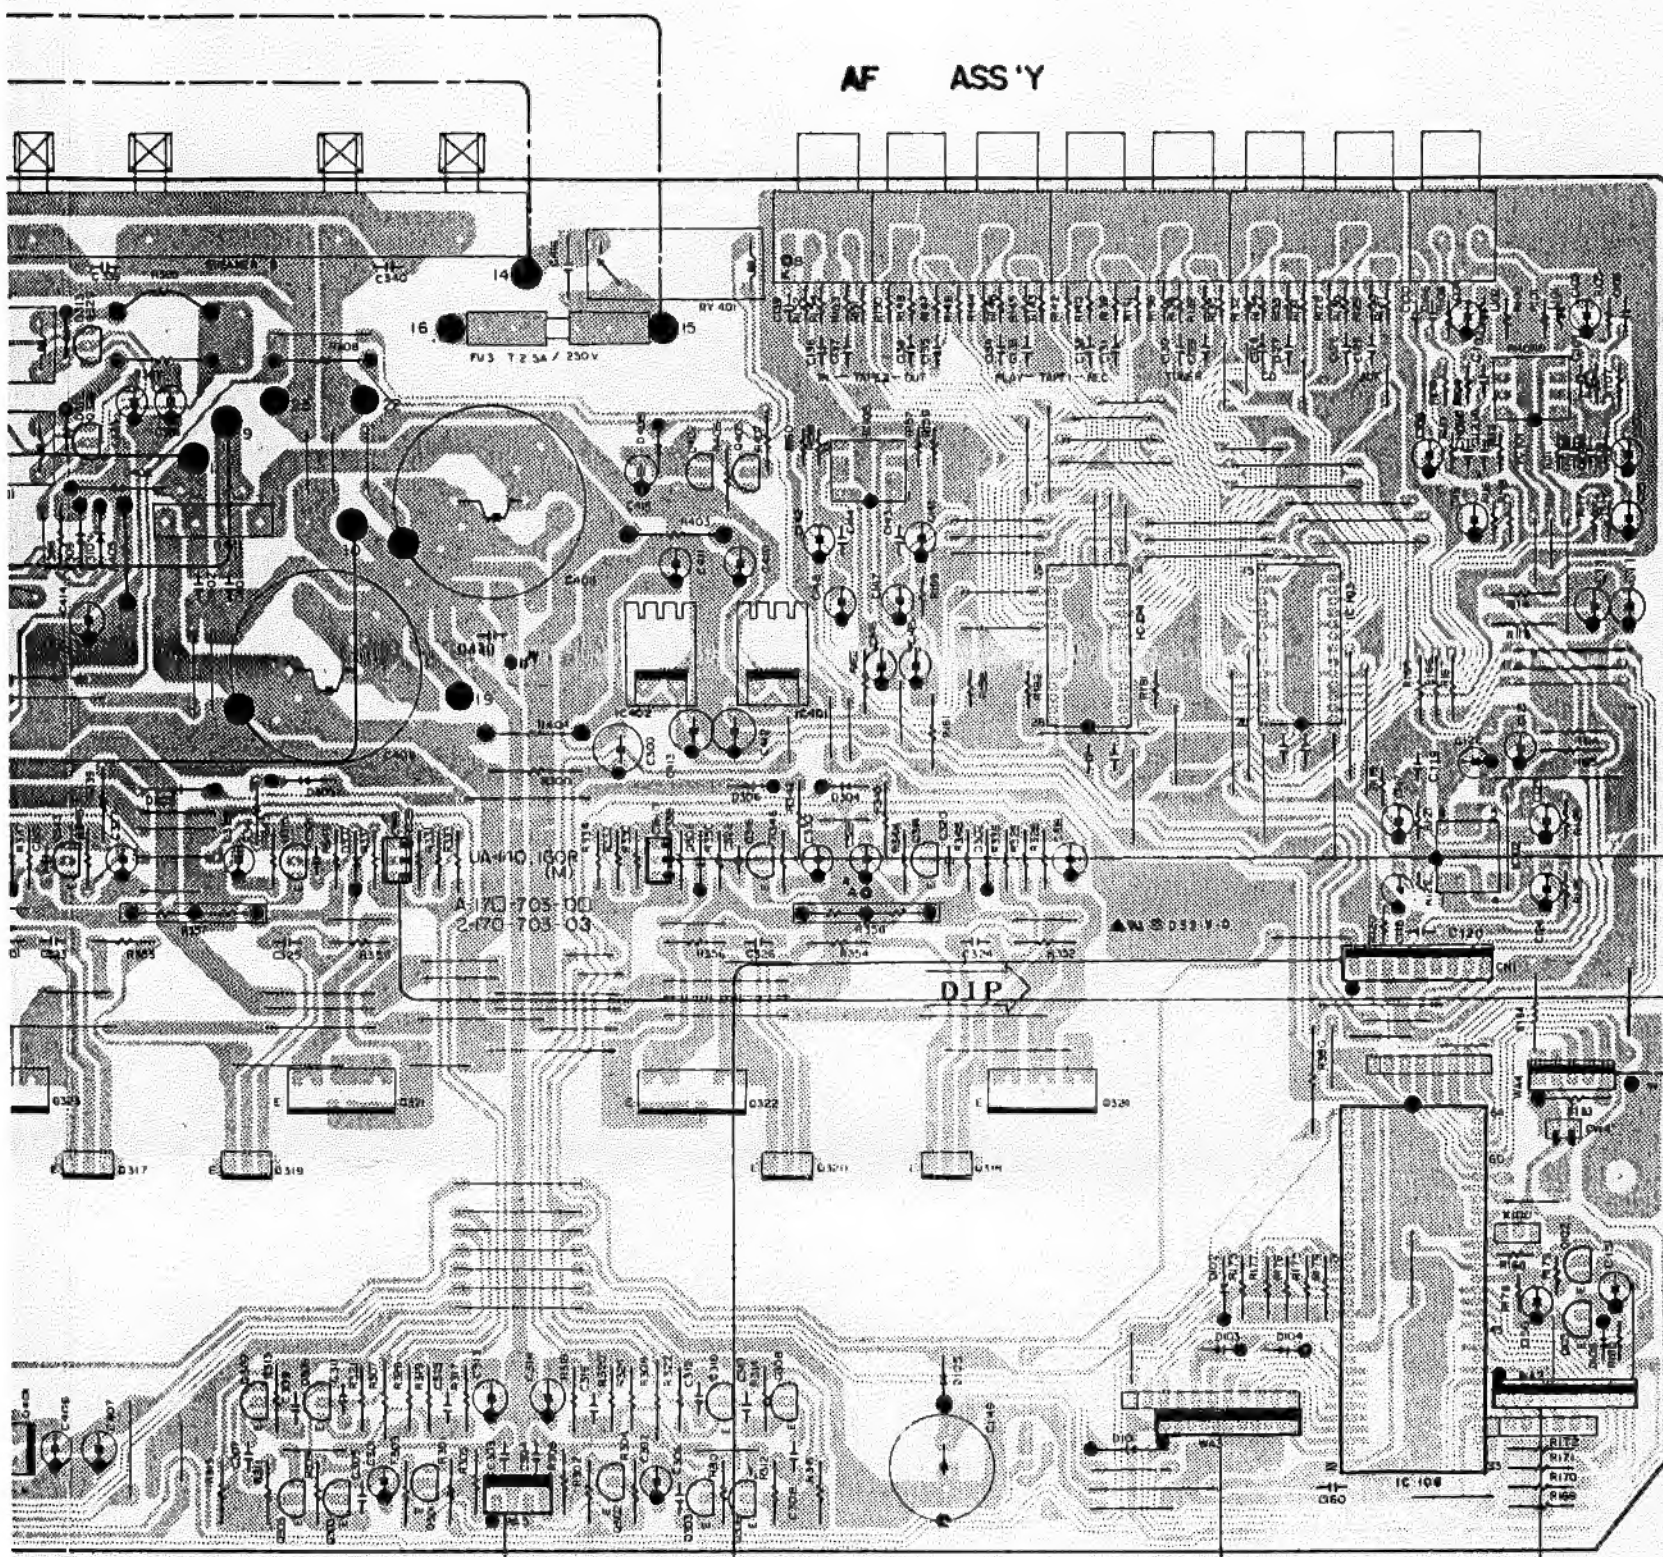


## TR ASS'Y

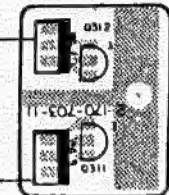

## ASS'Y

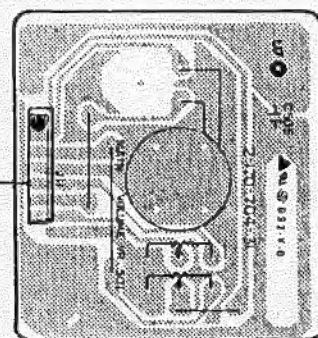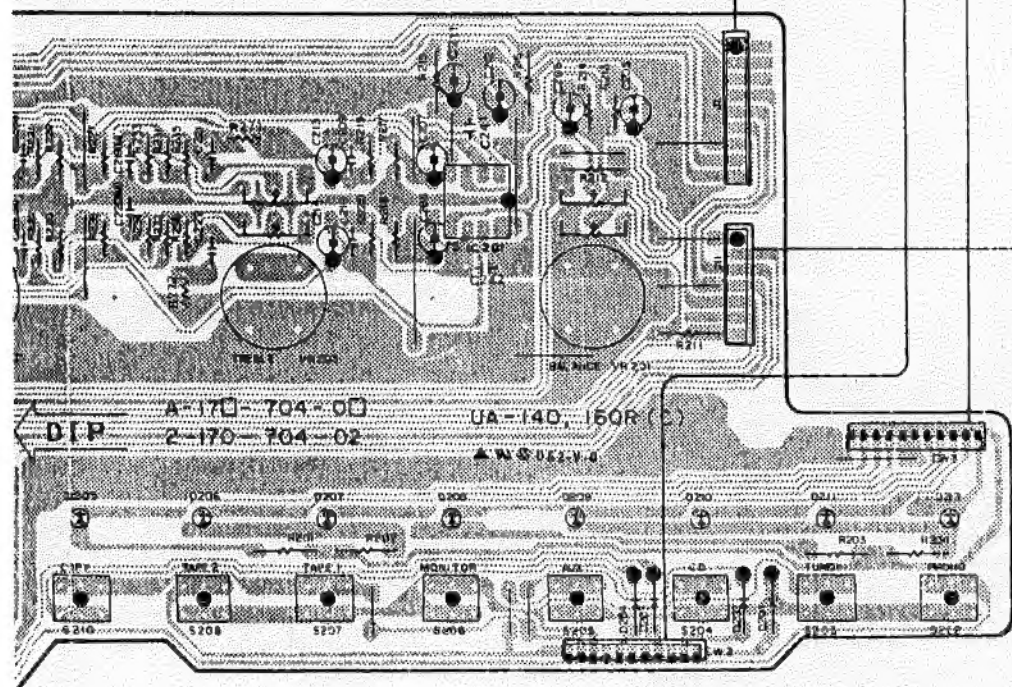

MAIN VOLUME ASS'Y  
(FOR UA-140)

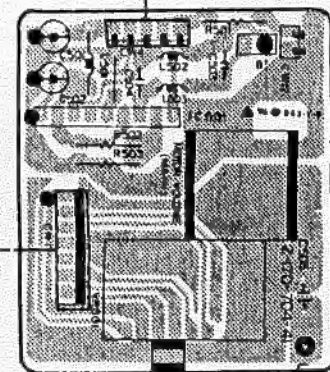

MOTOR VOLUME ASS'Y  
(FOR UA-160R)



## WIRING DIAGRAM

